Fire Pump Automatic Start

Datasheet
B.01/Apr2014

For fire pump automation

Opening of Fire Hydrant
Initial flow through Flow Switch on a by-pass (secundary circuit), preferencial way by the retention valve mounted in main circuit, turning the pump on.

Closing of Hydrant Water Output
The Flow Switch automatically will turn the pump off.

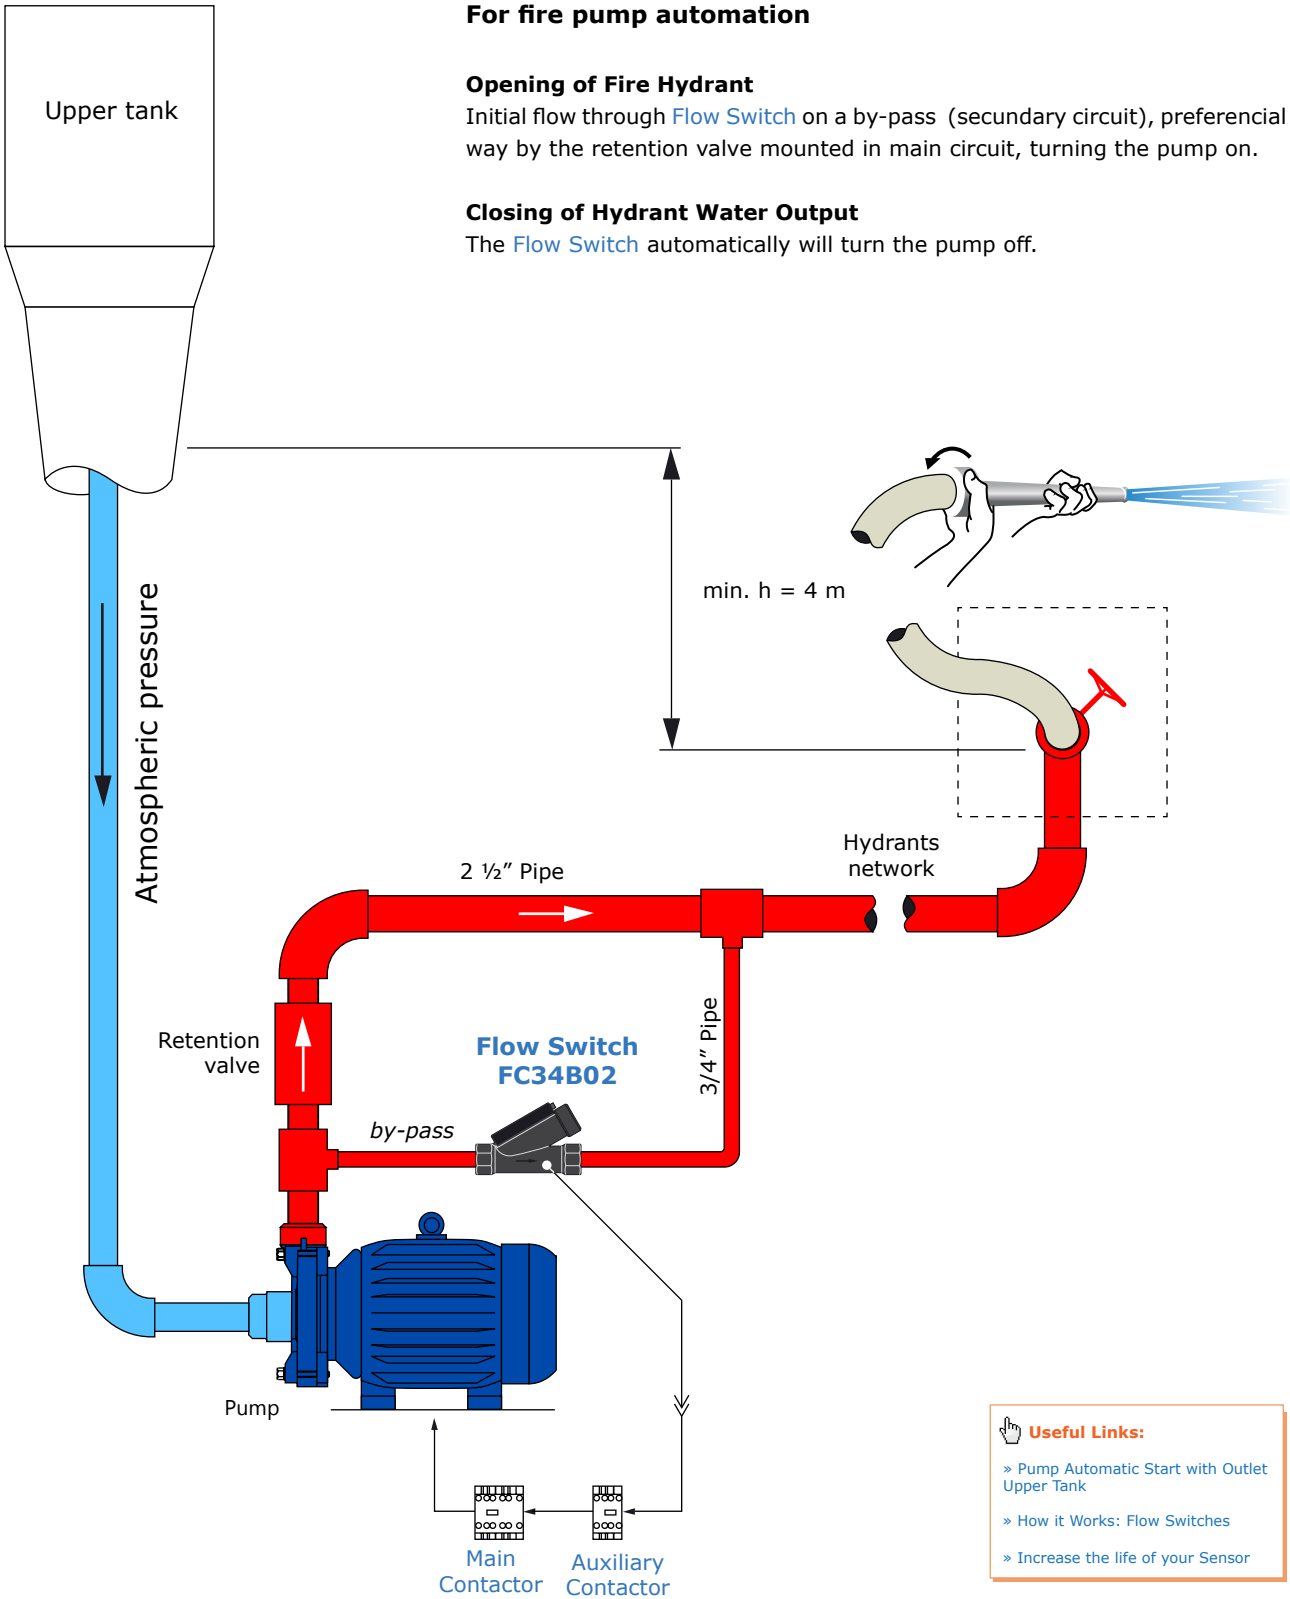

Useful Links:

» Pump Automatic Start with Outlet Upper Tank

» How it Works: Flow Switches

» Increase the life of your Sensor